

HAPPY

LAUSANNE

Quick User Guide

HAPPY
SURVEY

Important Information

Read this manual before using the device.

Keep this manual for future reference.


Always use the product according to its intended purpose and within the specified environmental and operating limits.


Table of Contents

1. Product Overview	3
2. Package Contents	4
3. Getting Started	5
4. Good Practices	5
5. Cleaning and maintenance	6
6. Transport and Storage	6
7. Battery Safety	7
8. Troubleshooting	7
9. Support	7
10. Disposal	8

1. Product Overview

The HAPPY LAUSANNE is a rugged field tablet designed for professional surveying.

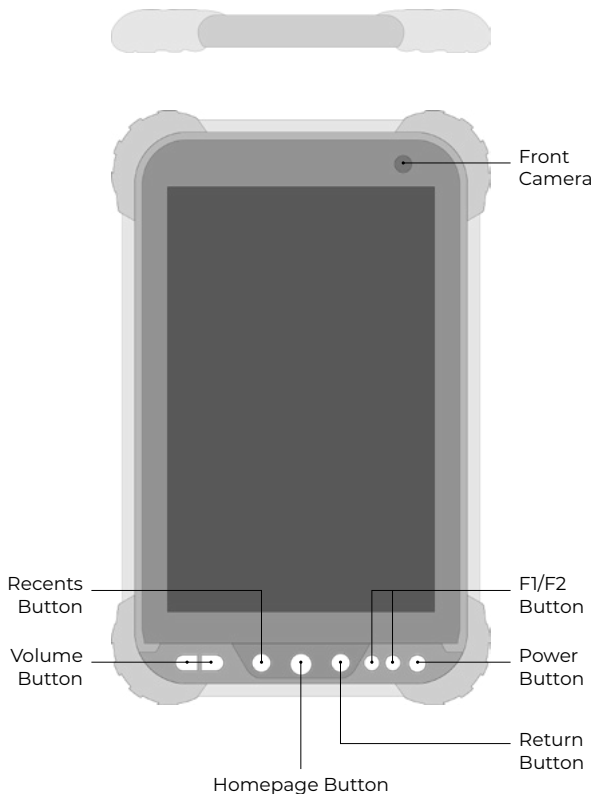

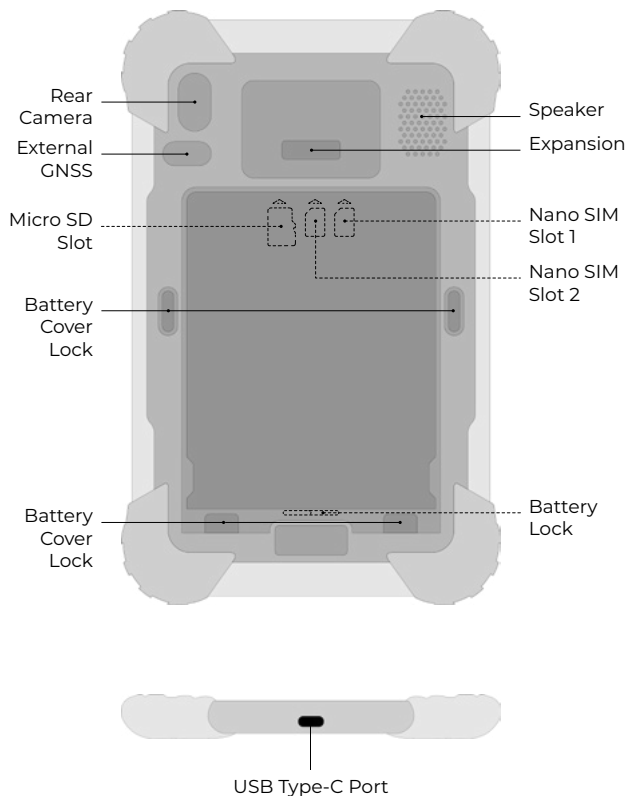

2. Package Contents

Before using the device, check that the package contains all the supplied components.

Depending on the configuration, the package may include:

- HAPPY LAUSANNE tablet
- Battery
- Charger
- USB cable
- Screen Protector
- Cleaning Cloth
- Quick User Guide
- Stylus Pen

Check the package before use. If any component is missing or damaged, contact HAPPY SUPPORT.

3. Getting Started

Battery - Only use the supplied charger and charging cable. Using unsuitable chargers or cables may damage the device or battery.

Do not use a battery that is damaged, swollen, leaking or unusually hot.

Switching the tablet on and off - Press and hold the Power button to switch the tablet on. To switch the tablet off, press and hold the Power button.

Touchscreen - The touchscreen can be operated using your fingers or a compatible stylus.

4. Good Practices

To ensure reliable operation and prolong the service life of the tablet:

- Use the original charger.
- Keep the charging ports clean and dry.
- Protect the tablet from impacts and falls.

- Always use the case when transporting the device.
- Do not place heavy objects on the tablet.
- Do not use sharp or metallic objects on the display.
- Keep the display clean and free from abrasive particles.
- Do not pull cables by the cable itself; disconnect them by the connector.
- Avoid unnecessary exposure to direct sunlight and heat.
- Do not expose the device to liquids beyond its specified IP rating (IP67).
- Do not modify or disassemble the tablet.

5. Cleaning and Maintenance

Clean the tablet regularly, especially after use in dusty or muddy environments. Use a soft, clean, lint-free cloth. If necessary, slightly dampen the cloth with clean water.

Do not:

- use solvents or aggressive detergents;
- spray liquids directly onto the tablet;
- use abrasive materials;
- apply excessive pressure to the display or camera.

Before cleaning, disconnect the tablet from external power and close all protective covers.

6. Transport and Storage

Always transport the HAPPY LAUSANNE in its protective case or in suitable protective packaging.

When storing the tablet for an extended period:

- keep it in a clean and dry environment;
- avoid extreme temperatures and direct sunlight;
- protect it from dust, moisture and mechanical shocks;

If the tablet is moved between environments with significant temperature differences, allow it to reach the ambient temperature before use.

7. Battery Safety

Lithium-ion batteries require proper handling.

- Use only original batteries and chargers.
- Do not open, crush, puncture or modify the battery.
- Keep the battery away from fire and excessive heat.
- Do not use a damaged or deformed battery.
- Do not short-circuit the battery contacts.
- Dispose of batteries according to local regulations.

If the battery becomes unusually hot, swollen, damaged or emits an unusual smell, stop using it immediately, remove it from the tablet and contact HAPPY SUPPORT.

8. Troubleshooting

The tablet does not switch on - Connect the tablet to the supplied charger.

The touchscreen does not respond correctly - Clean the display and make sure it is dry. If the problem persists, remove the battery and restart the tablet.

The battery drains quickly - Check the brightness, wireless connections and applications running in the background.

The tablet becomes unusually hot - Stop using the device if the temperature becomes excessive. Move it away from direct sunlight and allow it to cool down. If the problem persists, remove the battery and contact HAPPY SUPPORT.

9. Support

Before contacting HAPPY SUPPORT, have the following

information available:

- Product model
- Serial number
- Operating system / software version
- Description of the problem
- Relevant photos or screenshots, if applicable

10. Disposal

Do not dispose of the tablet or its battery with unsorted household waste.

Electronic equipment and batteries must be collected and disposed of according to the applicable local regulations.

Separate collection helps prevent potential environmental and health risks and allows materials to be recovered and recycled.

HAPPY Support

www.happysurvey.ch

support@happysurvey.ch

Via Pian Scairolo 23, 6912 Lugano